


Cutaway Chin-Strap Assembly

1 Assemble both sides as shown


Cutaway side
(right)

Fixed side
(left)

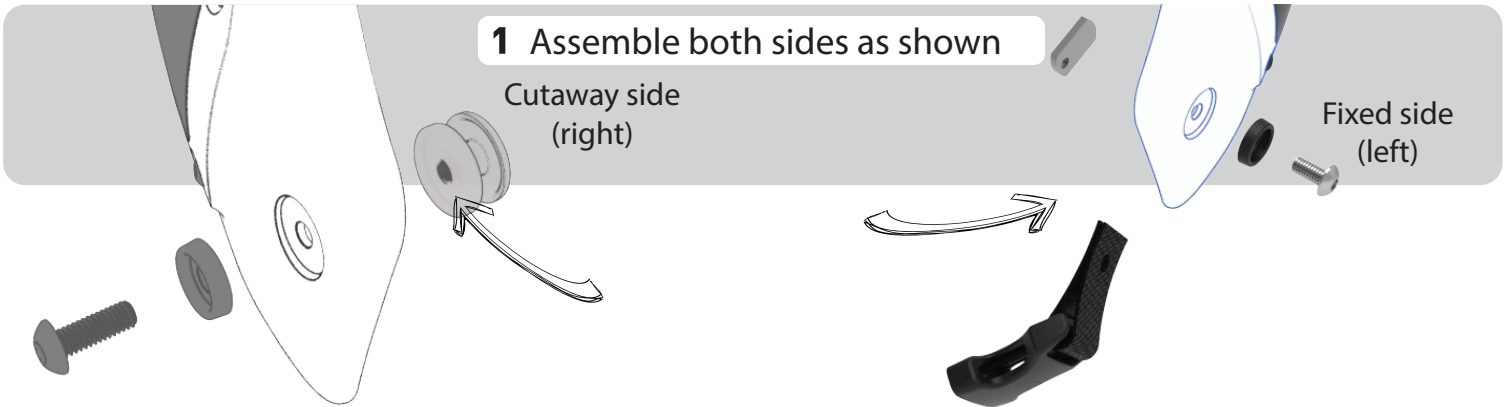

2 Snap together Cutaway assembly

Insert both clips into bobbin

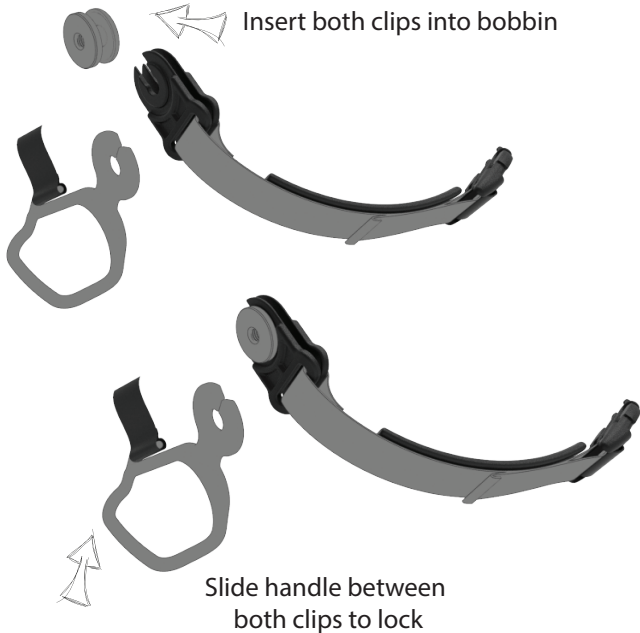

Slide handle between
both clips to lock

Velcro



Mate this tab with supplied
adhesive backed Velcro
to eliminate rotation of the
Cutaway handle

3 Using the Cutaway



Pull handle