


# Cutaway Chin-Strap Assembly

**1 Assemble both sides as shown**


Cutaway side  
(right)

Fixed side  
(left)

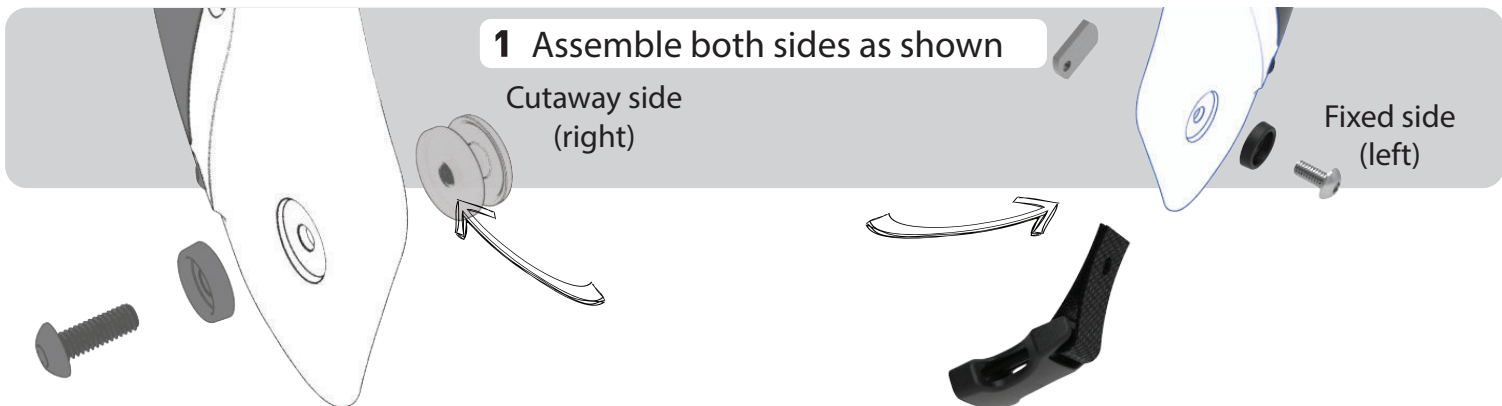

**2 Snap together Cutaway assembly**

Insert both clips into bobbin

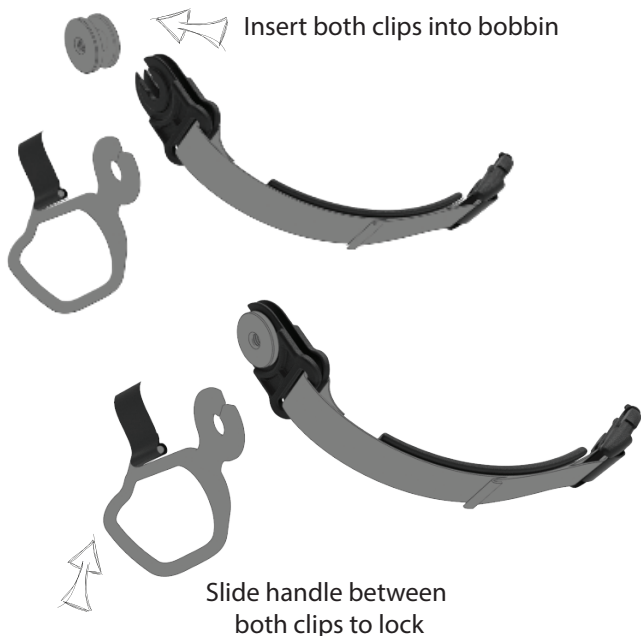

Slide handle between  
both clips to lock

Velcro



Mate this tab with supplied  
adhesive backed Velcro  
to eliminate rotation of the  
Cutaway handle

**3 Using the Cutaway**



Pull handle